


Phoenix EasyPlus

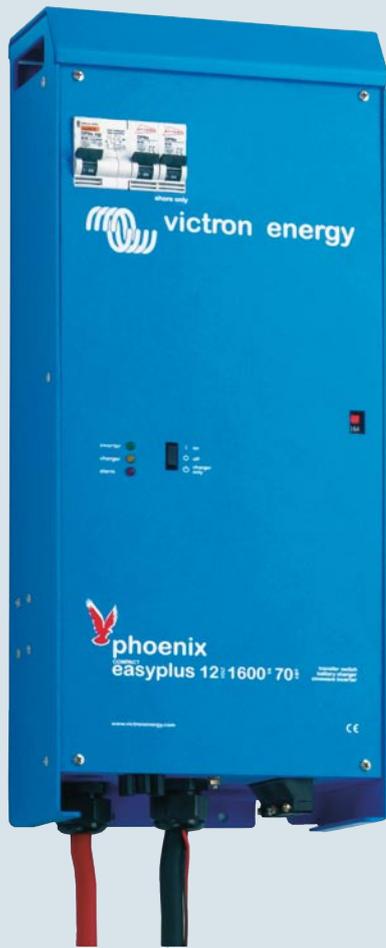

Multi-functional power solution

The Phoenix EasyPlus is a multifunctional energy system consisting of a powerful sinewave inverter, a sophisticated battery charger, a high speed AC transfer switch and AC distribution in a single light weight and compact enclosure. The system has been designed for those who want to enjoy the comfort and freedom of a complete energy system without spending time on the installation of separate components and difficult technical procedures

Optimum comfort and safety

The EasyPlus guarantees uninterrupted power supply, whenever and wherever you are. Where shore or generator power is limited, the unique **PowerAssist®** technology makes it possible to boost the total capacity by adding extra energy from the batteries. Optimum safety is guaranteed with the integrated RCD (Residual Current Device) protecting against earth leakage.

5 step installation: quick and easy

The EasyPlus gets its name from the simplicity of installation and use. The system can be installed within five simple steps making significant savings in time as well as space. The Easy Plus provides plugs and sockets for all AC connections and is supplied with the battery cables already fitted so you can save hours in installation time.

Step 1. Select a suitable place for the EasyPlus (as close as possible to the batteries) and install the wall mounting bracket. Attach the Easy Plus to the bracket and secure it with the screws provided.

Step 2. Connect the shore/generator input power and the outgoing circuits (including dedicated water heater feed) to the Easy Plus.

Step 3. Connect the control panel (optional) with the UTP patch lead.

Step 4. Connect the battery cables and temperature sensor to the batteries (also supplied as standard).

Step 5. Switch on the RCD, the AC distribution and the inverter charger and the system is ready to use.

How does it work?

The Phoenix EasyPlus is connected to the batteries and to the shore power or generator. The maximum available generator or shore current is set using the dial on the control panel. The output consumers are divided into two groups. The first group consists of the 'regular', low or short term power users such as sockets or kitchen equipment. This group can be fed from both shore/generator and battery power via the inverter. The second group is the 'heavy user' circuit. This can be a water heater or the air-conditioning. In order to protect the batteries from excessive discharge, this group is shore/generator-only and cannot be supplied when the inverter is functioning. Unique **PowerAssist®** technology protects the shore or generator from being overloaded by adding extra inverter power when needed.



Technical information

12 Volt 1600VA sine wave inverter (3000 Watt peak power)

70A charger incl. 4A trickle charge for start battery

Unique **PowerAssist**[®] technology protects the shore or generator from being overloaded by adding extra inverter power when needed

4 stage adaptive charge technology for quick and accurate battery charging

RCD (30mA/16A) on AC output

Two AC output sockets protected by 16A automatic circuit breakers for optimum safety

Second AC output active only when shore power is available

No-break system: uninterrupted switching between shore/generator and inverter

Battery cables included

24 Month worldwide warranty

Dimensions

Height : 510 mm

Width : 214 mm

Depth : 110 mm

Weight: 11,7 Kg



Typical installation and Wiring Diagram

